

ELECTRO FREEZE®

Replacement Parts Manual with Illustrations

FREEDOM 360°
Series

**Soft Serve Freezer
Model 30RMT**

P/N 184955-01 6/03

Replacement Parts Orders

You must have the serial number of your freezer when ordering parts — parts may differ with a particular serial number of the same model.

Parts are listed using terminology that best fits the function of the part. The illustrations in this section will help you to find the correct part number and description.

Place your parts order through your local authorized Electro Freeze Distributor.

Name: _____

Address: _____

Phone: _____

If you require further assistance, contact H.C. Duke & Son, Inc., Electro Freeze, as follows:



Phone: (309) 755-4553

Fax: (309) 755-9858


Table of Contents

ILLUSTRATIONS

Figure 1	Head Assembly	1
Figure 2	Beater Shaft Assembly	2
Figure 3	Cabinet Parts	3
Figure 4	Mix Transfer System (MTS)—RMT	4
Figure 5	MTS—RMT Hose Assembly	6
Figure 6	Switch Assembly	7
Figure 7	Relay Box — MTS	7
Figure 6	Switch Box	8
Figure 9	Side/Back View	10
Figure 10	Panels	12
Figure 11	Gear Reducers	14
Figure 12	Mix Feed Seal Assembly	15
Figure 13	Air-Cooled Remote Condenser	16

OTHER LISTS AND INFORMATION

Accessories	17
O-Ring Chart.....	18
Alphabetized Parts List	19

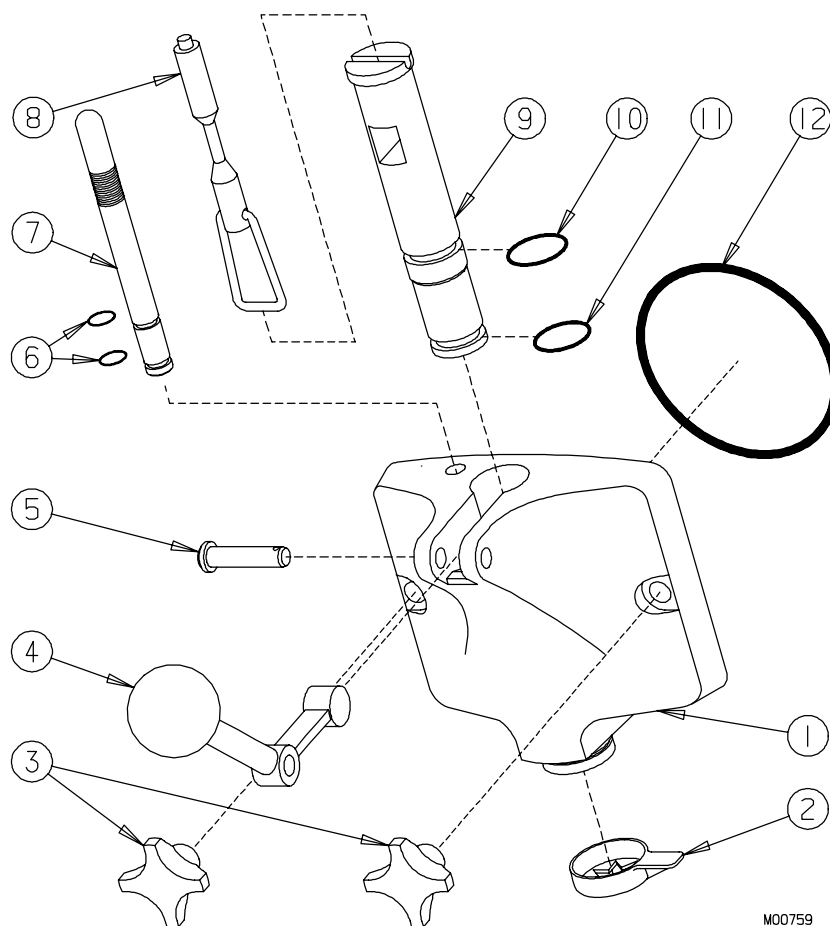

M00759

Figure 1 Head Assembly

Item	Part No.	Description
*	118902	Head-Assy. Ported w/Actuator & Bleed (Complete)
1	118566	Head-Assy. w/Actuator
2	196185	Nozzle-Serrated
3	136798	Knob-Hand
4	110007	Handle-Assy. Dispense
5	160268	Pin-Handle
6	160610	O-Ring (Plug)
7	138149	Plug-Air Bleed
8	113426	Push Rod-Assy. Plunger Switch
9	139581	Plunger-Dispense Self Close
10	160501	O-Ring (Plunger-Upper)
11	160582	O-Ring (Plunger-Lower)
12	159309	O-Ring (Head)

* Includes all items shown here, except 3 and 8.

Not Shown:

116410	Kit-Dispense Head Switch
114341	Stud Assy.-Cylinder 1- ¹⁵ / ₁₆ inch


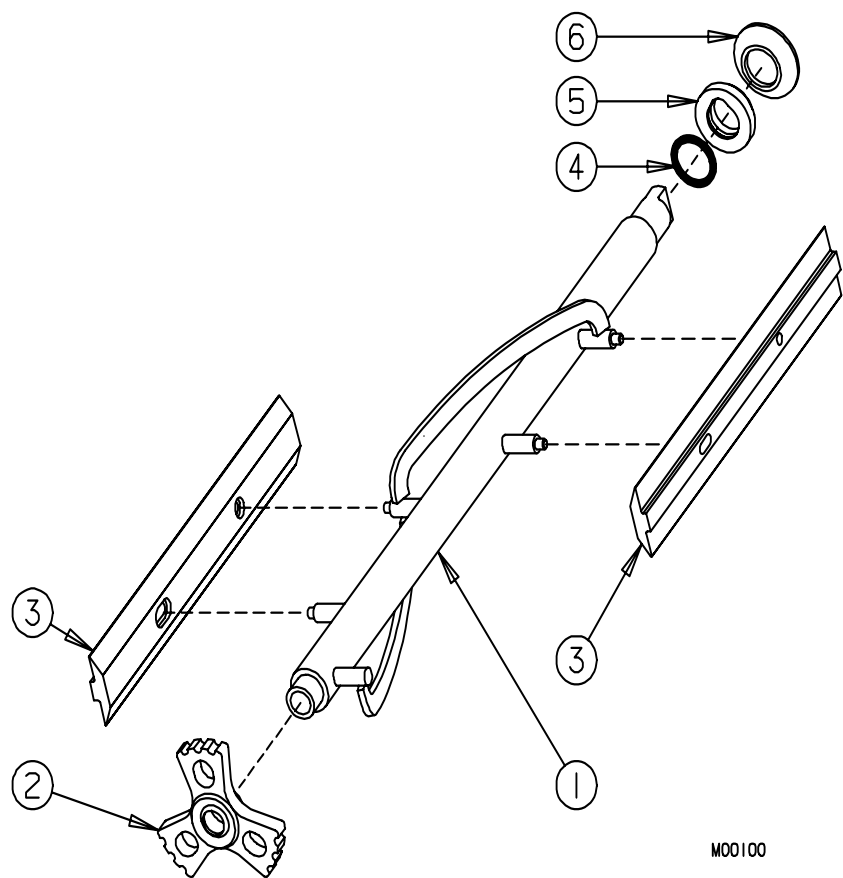


Figure 2 Beater Shaft Assembly

Item	Part No.	Description
1	113438	Shaft-Assy. Beater
2	196085	Bushing-Cylinder
3	137334	Blade-Scraper Soft Serve
4*	160500	O-ring (Seal)
5*	133098	Washer-Shaft Seal
6*	160557	Seal-Beater Shaft

* Items 4,5,6 can be ordered together as:
111875 Seal-Assy. Shaft

ELECTRO FREEZE Soft Serve Model 30RMT

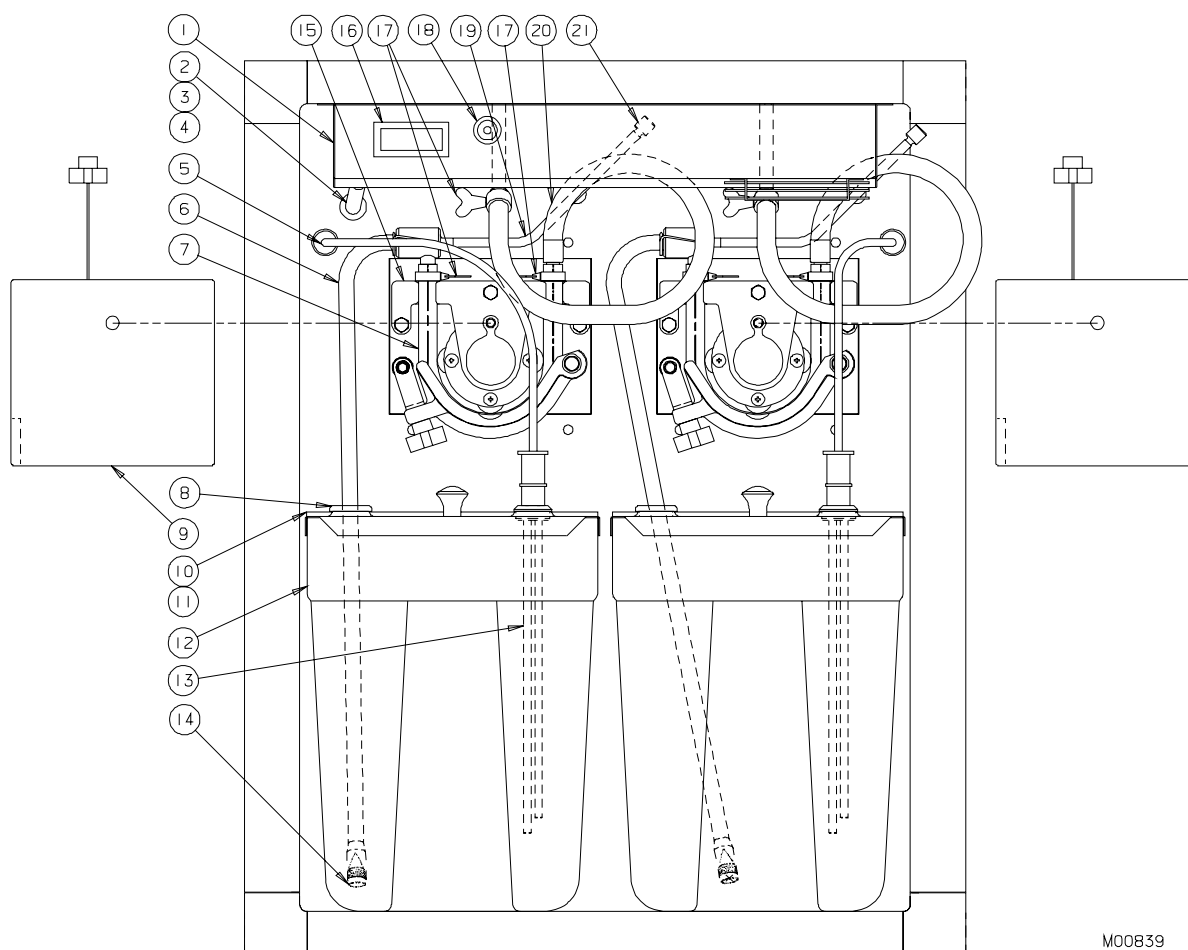


M00839

Figure 3 Cabinet Parts

REF.	PART No.	DESCRIPTION	REF.	PART No.	DESCRIPTION
1	117129-01	Shroud-Assy. Evaporator	9	118767	Cover-Assy. RMT
	150532	Cord-Assy. Male Plug	10	113997	Cover-Assy. Front Mix Tank
	151105	Fan-Intake (Cabinet)	11	138165-01	Cover-Rear Mix RMT
	151076	Guard-Fan Open	12	196222	Tank-Mix 7 Gal. 13-1/2"
	150509	Switch-Door Push Button	13	115397	Probe-Assy. Mix Level 10-3/4" (7 Gal.)
	161004	Thermometer-Barrel		137120	Base-Probe Mtg.
1A	155111	Coil-Evaporator	14	199032-01	Duckbill-Inlet
1B	150533	Cord-Assy. Female Plug	15	118751	MT-Assy CAB Redline (See Explode View-Figure 4)
2	160738	Clamp-Hose Drain	16	161004	Thermometer-Barrel (Cabinet)
3	196068	Tubing-3/8 ID x 1/2 OD	17	116065	Clamp-Assy. Soft Hose 5/8
4	138919	Tube-Drain Support	18	150509	Switch-Door Push Button
5	150537	Cordset-Mix Level Probe	18A	118597	Actuator-Assy. Door Switch
5A	150536	Receptacle-Molded Level Sensor	19	138170-02	Tube-Air
6	118842	Tube-Assy. Pickup	20	116094	Hose-Assy. Mix Braided
	162324	Clip-Tube Retainer	21		Meter-Air (Order by meter number)
	118765	Port-Assy. Inlet Mix/Air			
	118836	Tube-Assy. Mix Inlet			
	160502	O-ring			
7	138836	Hose-Transfer Red Line			
8	199033	Boot-Mix Tube			

Figure 4 Mix Transfer System — RMT (sheet 1 of 2)

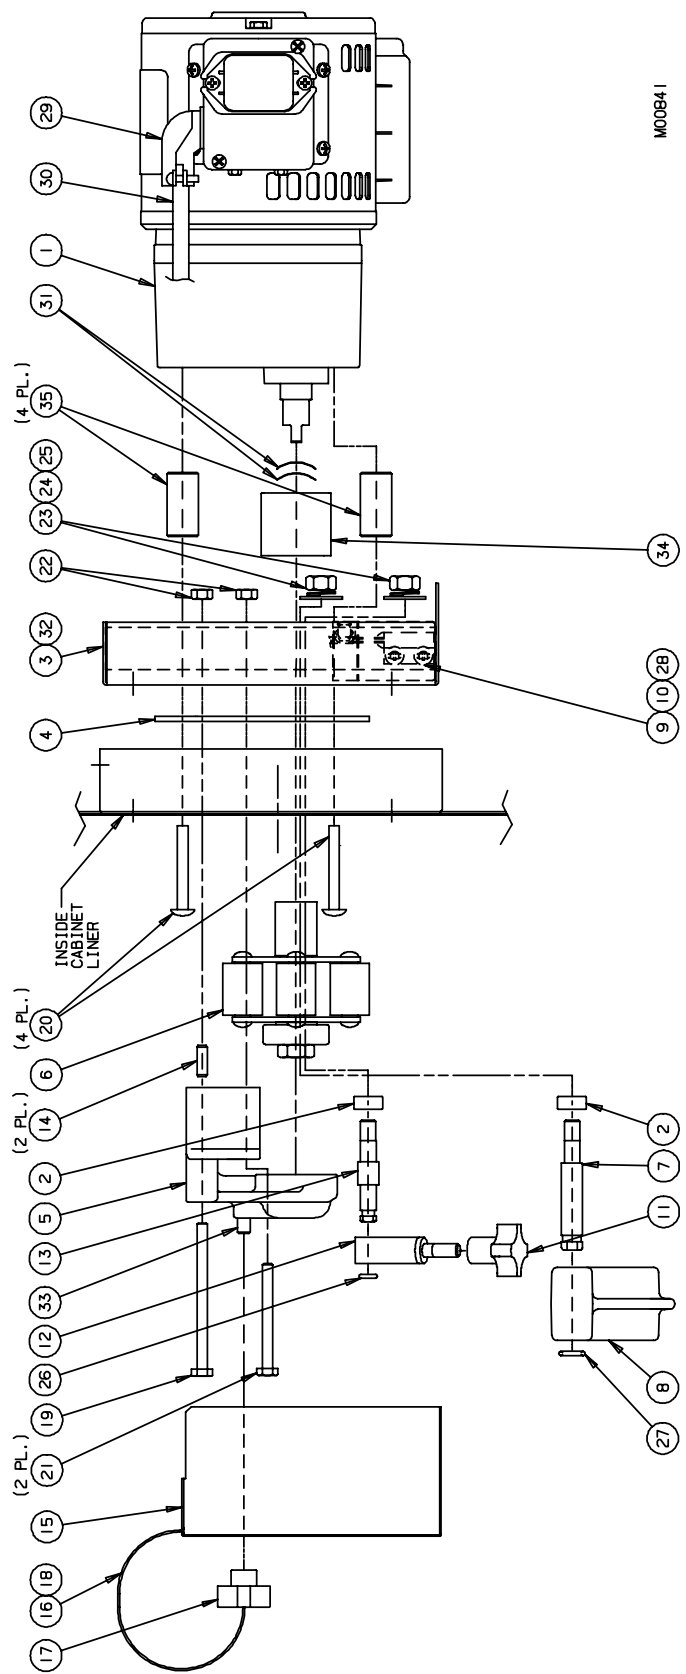

Use only original or authorized replacement parts with this freezer


Figure 4 Mix Transfer System — RMT (Sheet 2 of 2)

Item	Part No.	Description
*	118751	MT-Assy. CAB Red Line
1	151132	Gearmotor-1/8 HP includes replaceable parts
	150512	Capacitor-Start w/Bleed
	150893	Switch-Start Solid State (Relay)
2	138800	Spacer-Swing Arm
3	118764	Faceplate-Assy. MTS
4	139746	Plate-Backup MTS
5	138783-01	Support-Roller Bearing
6	116009-01	Kit-Roller (Complete)
7	138797	Arm-Shoe Pivot
8	139751	Shoe-Roller
9	118763	Bracket-Assy. Switch Mtg.
10	118894	Kit-Cover Switch RMT Freezer
	160357	Screw-RDHM #4-40 x 1/4 STL
	160393	Washer-Flat #6 Brass
11	162622	Knob-Hand
12	138798	Clamp-Shoe Swing
13	138799	Arm-Swing Clamp
14	160338	Pin-Dowel 1/4 DIA x 3/4 SST
15	118767	Cover-Assy. RMT
16	138890	Lanyard-Wire
17	138889	Knob-Cover RMT
18	160508	Sleeve-Cable Stop 3/64
19	160465	Screw-HXHC 1/4-20 x 3-1/2 SST
20	160093	Screw-TRPS 1/4-28 x 2-1/4 SST
21	160464	Screw-HXHC 1/4-20 x 2-1/2 SST
22	159933	Nut-HXSF 1/4-20 SST
23	160169	Washer-Lock 3/8 SST
24	159927	Nut-HEX 3/8-16 SST
25	160170	Washer-Flat 3/8 SST
26	160628	O-ring (Swing Clamp)
27	160612	O-ring (Roller Shoe)
28	159939	Screw-HXSF 1/4-20 x 11/16 SST
29	150705	Connector-3/8 x 90°
30	118833	Cord-Assy. Motor
31	160145	Washer-Curved Spring
32	165524	Block-Insulation RMT
33	160386	Stud-5/16-18 x 3/4 SST
34	139756	Shield-Drip
35	138793	Spacer-Motor

Not Shown:

165246	Decal-Warning Pressurized
165048	Decal-Warning Rotating Parts

* Includes all items above.

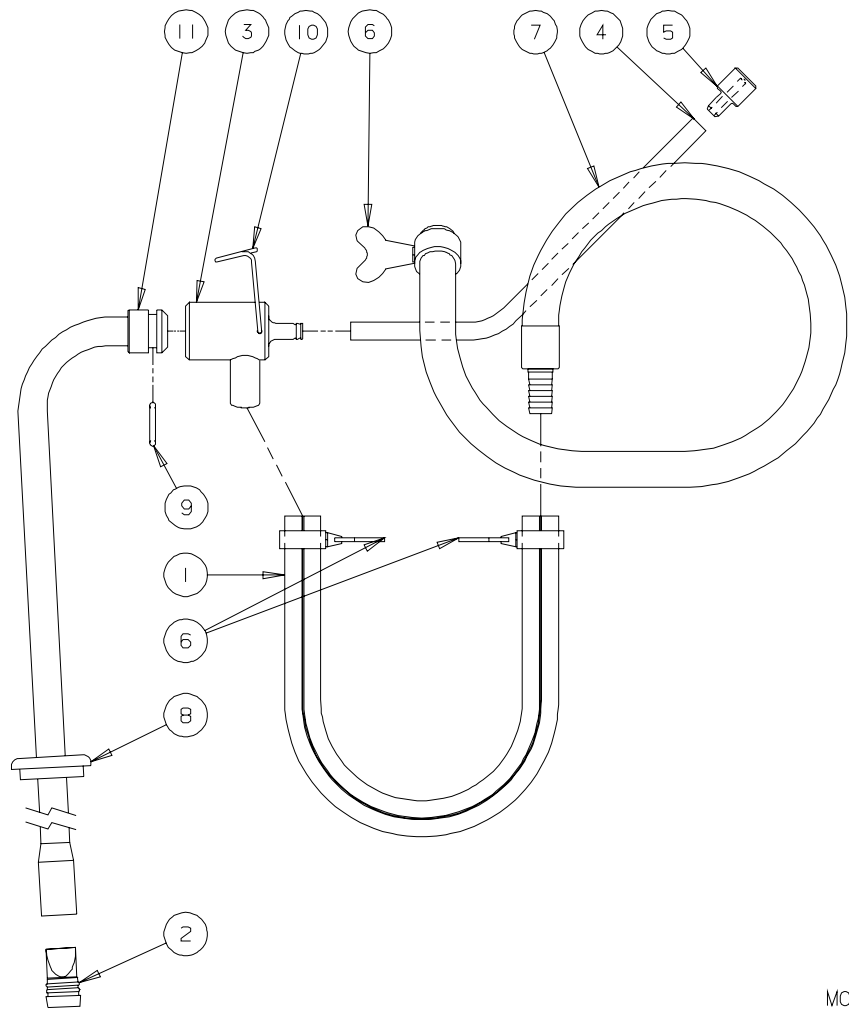

MO0840

Figure 5 MTS—RMT Hose Assembly


Item	Part No.	Description
1	138836	Hose-Transfer Red Line
2	199032-01	Duckbill-Inlet (Valve)
3	118765*	Port-Assy. Inlet Mix/Air
4	138170-02	Tube-Air (Hose)
5		Meter-Air (Order by meter number)
6	116065	Clamp-Assy. Soft Hose 5/8
7	116094	Hose-Assy. Mix Braided
8	199033	Boot-Mix Tube (Seal)
9	160502*	O-ring
10	162324*	Clip-Tube Retainer
11	118836*	Tube-Assy. Mix Inlet

* Can be ordered as an assembly:
118842 Tube-Assy. Pickup

Figure 6 Switch Assembly

Item	Part No.	Description
*	114176-01	Switch-Assy. Self Closing Plunger (Sides)
1	114174	Guide-Assy. Push Rod
2	150477	Switch-Roller Actuator SPDT (Sides)
3	160104	Nut-HEX 1/4-20 ZN
4	159965	Screw-HSHM 1/4-20 x 2-1/2" ZN
5	162323	Spring-Compression

*Includes all items above.

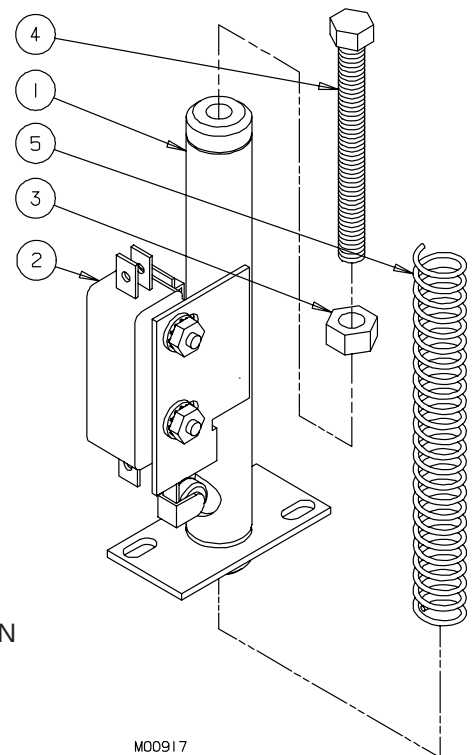

M00917

Figure 7 Relay Box — MTS

Item	Part No.	Description
1	150381	Relay-Flange Base w/Cover
2	160308	Screw-RDHM #6-32 x 5/16 ZN
2A	160116	Nut-Speed #6-32 BKOX
3	138159	Bracket-Flange Relay Mtg.
4	139805	Support-MTS
5	159950	Screw-HXSf 1/4-20 x 1/2 ZN
5A	159951	Nut-HXSf 1/4-20 ZN
6	150828	Connector 1/2



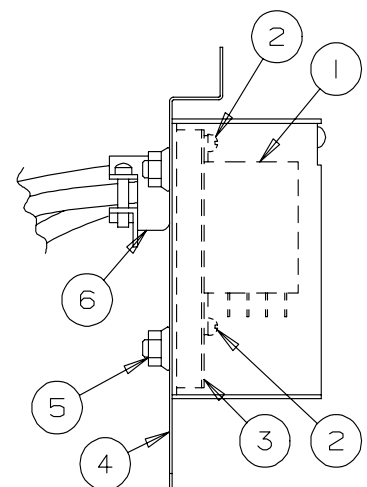



Figure 8 Switch Box (sheet 1 of 2)

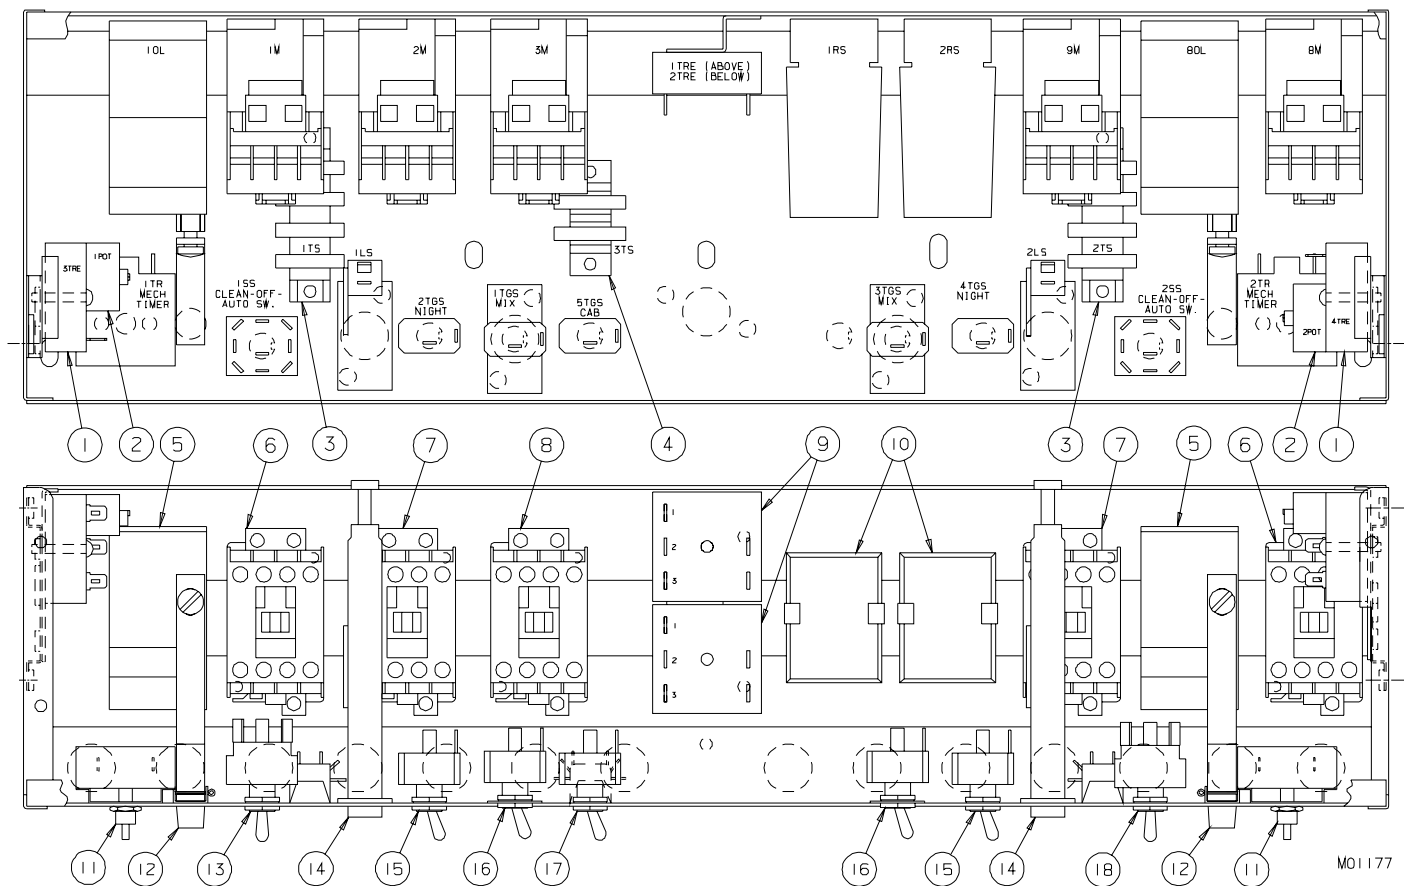

Detailed Drawings of
Filter and MOV Assemblies



Item #3A
MOV-Assy.
116188




Item #13A
Filter-Assy.
116125

Figure 8 Switch Box (sheet 2 of 2)

Item	Part No.	Description
1	150252-01	Timer-.5-60 Delay on Break 230
2	150253	Module-Plug On Vari Time
3	150795	Strip-Terminal
3A	116188	Mov-Assy. (See Detailed Drawings)
4	150798	Strip-Terminal
5	118359	Relay-Assy Overload 1 Phase 5-15A (Beater Motor)
	150140	Relay-SS Overload 1 Phase 5-15A
	150145	Adaptor-Overload Din Rail
	150150	Button-Overload Reset Adaptor
5A	118361	Relay-Assy Overload 3 Phase 3.7-12A (Beater Motor)
	150142	Relay-SS Overload 3 Phase 3.7-12A
	150145	Adaptor-Overload Din Rail
	150150	Button-Overload Reset Adaptor
6	150135	Contactor (Beater Motor)
6A	150134	Coil-Replacement (Not Shown)
7	150135	Contactor (Compressor)
7A	150134	Coil-Replacement (Not Shown)
8	150135	Contactor (Cabinet)
8A	150134	Coil-Replacement (Not Shown)
9	150208	Timer-12 Sec Delay on Brake
10	150202	Indicator-Mix Level (Not Shown)
10A	150119	Socket-Octal Terminal (Not Shown)
10B	150120	Clip-Retainer (Set of 2) (Not Shown)
10C	150540	Indicator-Light 230v (Not Shown)
11	150218	Timer-5 Minute
11A	162604	Knob-Timer (Not Shown)
12	118390	Lever-Assy Reset (Overload)
	159036	Button-Reset
13	150465	Switch-Toggle 3PDT Center Off (Selector)
13A	116125	Filter-Assy. (See Detailed Drawings)
14	114176-01	Switch-Assy. Self Closing Plunger
	150477	Switch-Roller Actuator SPDT
	162323	Spring-Compression
15	159235	Switch-Toggle SPST (Day/Night)
16	159235	Switch-Toggle SPST (MTS)
17	159235	Switch-Toggle SPST (Cabinet)
18	150465	Switch-Toggle 3PDT Center Off (Selector)


Figure 9 Side/Back View (sheet 1 of 2)

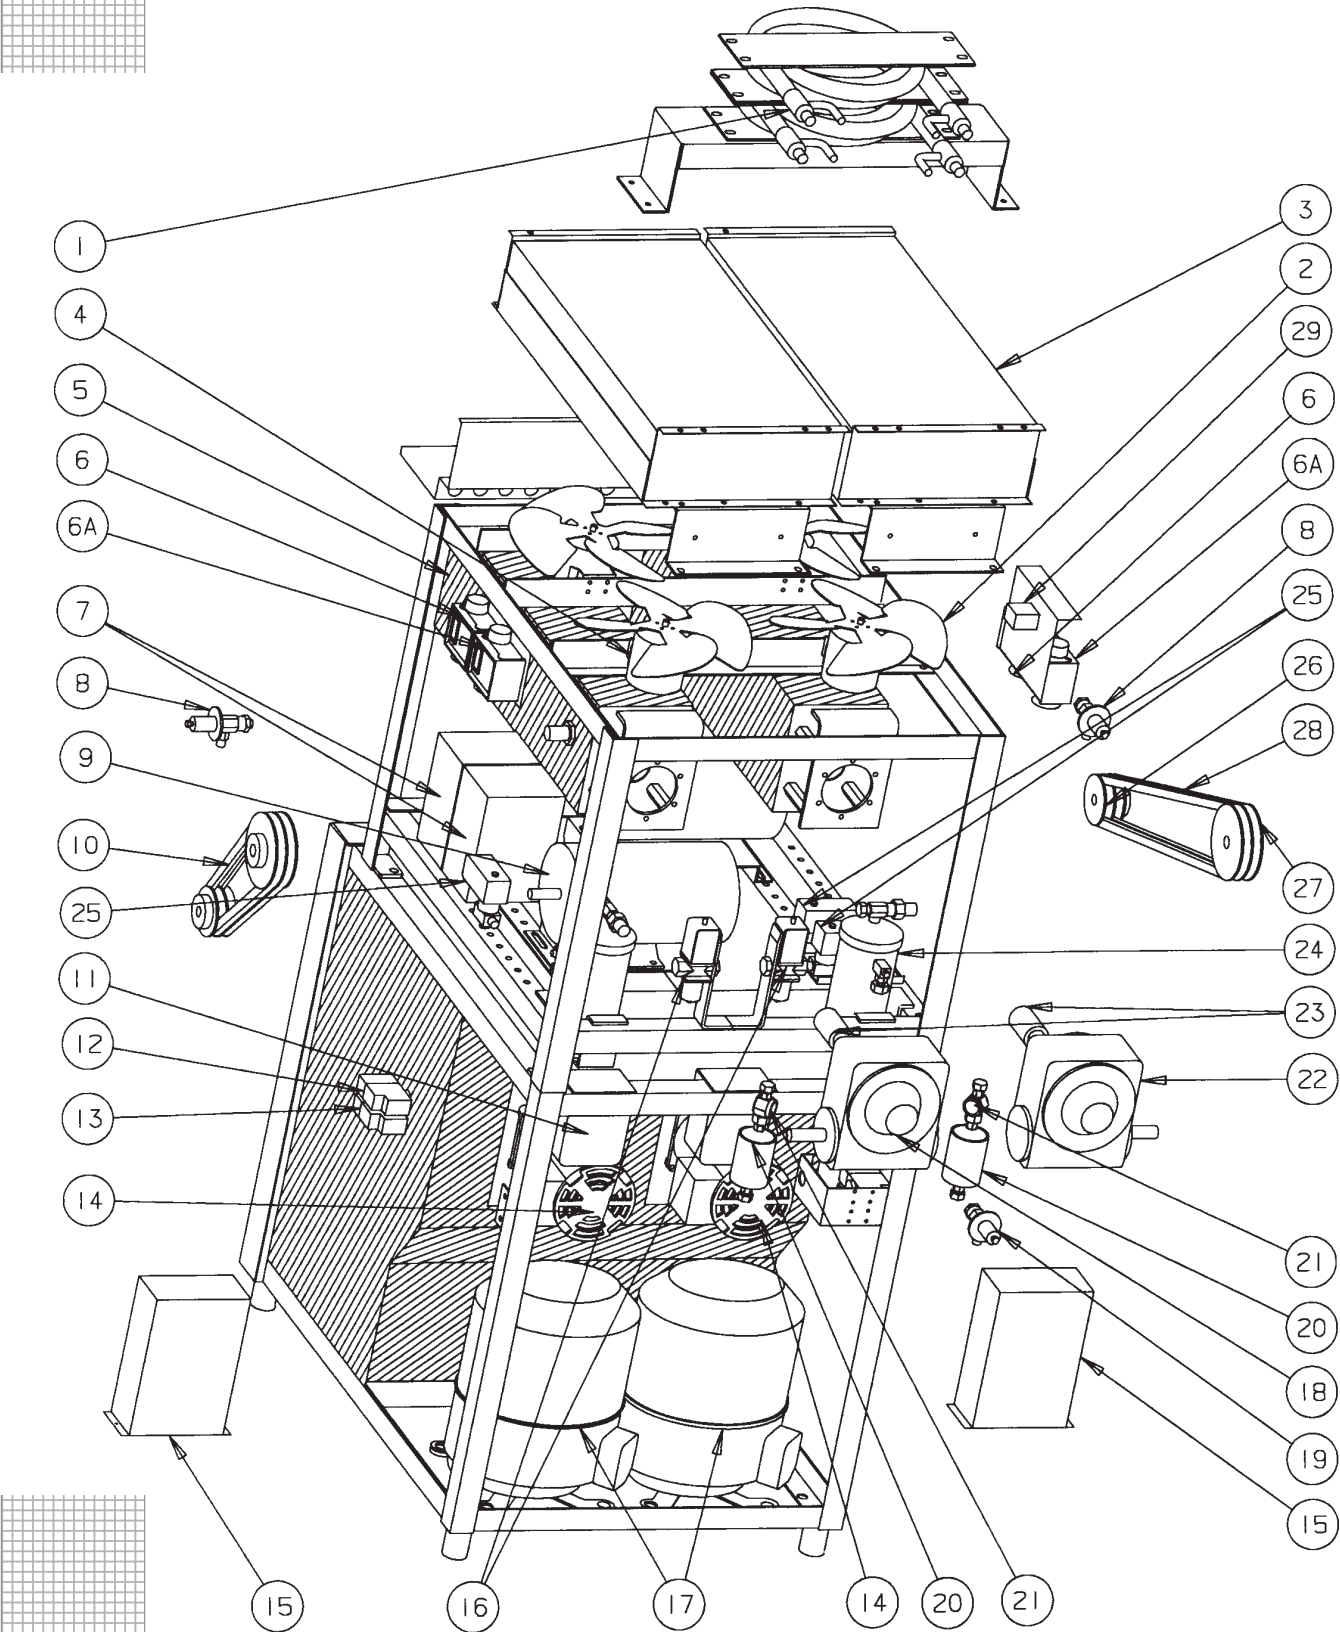

M00455


Use only original or authorized replacement parts with this freezer

184955-01

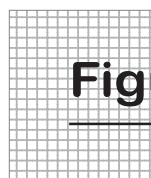**Figure 9 Side/Back View (sheet 2 of 2)**

Item	Part No.	Description	Item	Part No.	Description
1	155029	Condenser-Water	17	118685	Compressor-Assy (1 Phase) includes
2	159023	Blade-Fan 11 in. 36° (Air cooled)			151447 Capacitor-Run
3	155120-C	Condenser-Air			151448 Kit-Compressor Start Cap. & Relay
4	151077-01	Motor-Fan 50w 230v 60hz (Air Cooled)		155054	Filter-Drier
5	118822	Cylinder-Assy. Complete RH		118686	Compressor-Assy. (3 Phase) includes
5A	118821	Cylinder-Assy. Complete LH			155054 Filter-Drier
5B	118712	Kit-Pressure Switch	17A	118257	Valve-Assy. Rotalock RH
5C	116410	Kit-Dispense Head Switch	17B	118258	Valve-Assy. Rotalock LH
6	155442	Thermostat-Low (Day)	18	153356	Reducer-Gear RH
6A	155442	Thermostat-Low (Night)	19	155449	Valve-Automatic Expansion (Cabinet)
7	113442	Box-Assy. Capacitors & Components (Motor) (1 ph. only) includes	20	155054	Filter-Drier
		150872 Capacitor-Start (2)	21	155059	Glass-Sight
		150318 Capacitor-Run	22	153355	Reducer-Gear LH
8	155451	Valve-Automatic Expansion (Cylinder)	23	111964	Coupling-Assy 1 in Drive
9	151052	Motor-Beater 2 hp (3 ph.)	24	155057	Receiver 3 lb 3/8 ID (Air and Water Cooled)
	118140	Kit-Motor & Cap 2 hp (1 phase) includes		155058	Receiver-12 lb Sweat Horiz. (Air Cooled Remote)
		150872 Capacitor-Start (2)	25	155421	Valve-Solenoid
		150318 Capacitor-Run	25A	155434	Kit-Solenoid Valve Repair
10	153162	Belt-V RH	26	153625	Sheave-5/8 Bore 4.75 OD (Pulley-Driven)
11	--	Box-Assy. Relay (See Fig. 7)		153322	Key-Drive 3/16 sq x 1-1/2
12	155425	Cut Out-High Pressure		160495	Screw-SK Set 5/16-18 x 3/8
13	155403	Cut Out-Low Pressure (Air and Water Cooled)	27	153626	Sheave-7/8 Bore 3.25 OD (Pulley-Driver)
	155465	Cut Out-Low Pressure (Air Cooled Remote)		153322	Key-Drive 3/16 sq x 1-1/2
14	151132	Gearmotor-1/8 hp CSIR (MTS Motor) includes replaceable parts		160495	Screw-SK Set 5/16-18 x 3/8
		150512 Capacitor-Start w/ Bleed	28	153171	Belt-V LH
		150893 Switch-Start Solid State (Relay)	29	118868	Thermostat-Assy. w/Cover (Cabinet)
15	118647	Box-Assy. Capacitor & Relay (1 Phase Only)(Compressor)	Not Shown:		
		151447 Capacitor-Run		117133	Pan-Assy. Condensate
		151448 Kit-Compressor Start Cap. & Relay		161216	Sensor-10K Thermistor
16	112080	Valve-Assy. Water includes	LH or RH — Left or right hand is determined as you face the front of freezer.		
	155410	Valve-Water			
16A	155444	Kit-Water Valve Repair			

Figure 10 Panels (sheet 1 of 2)

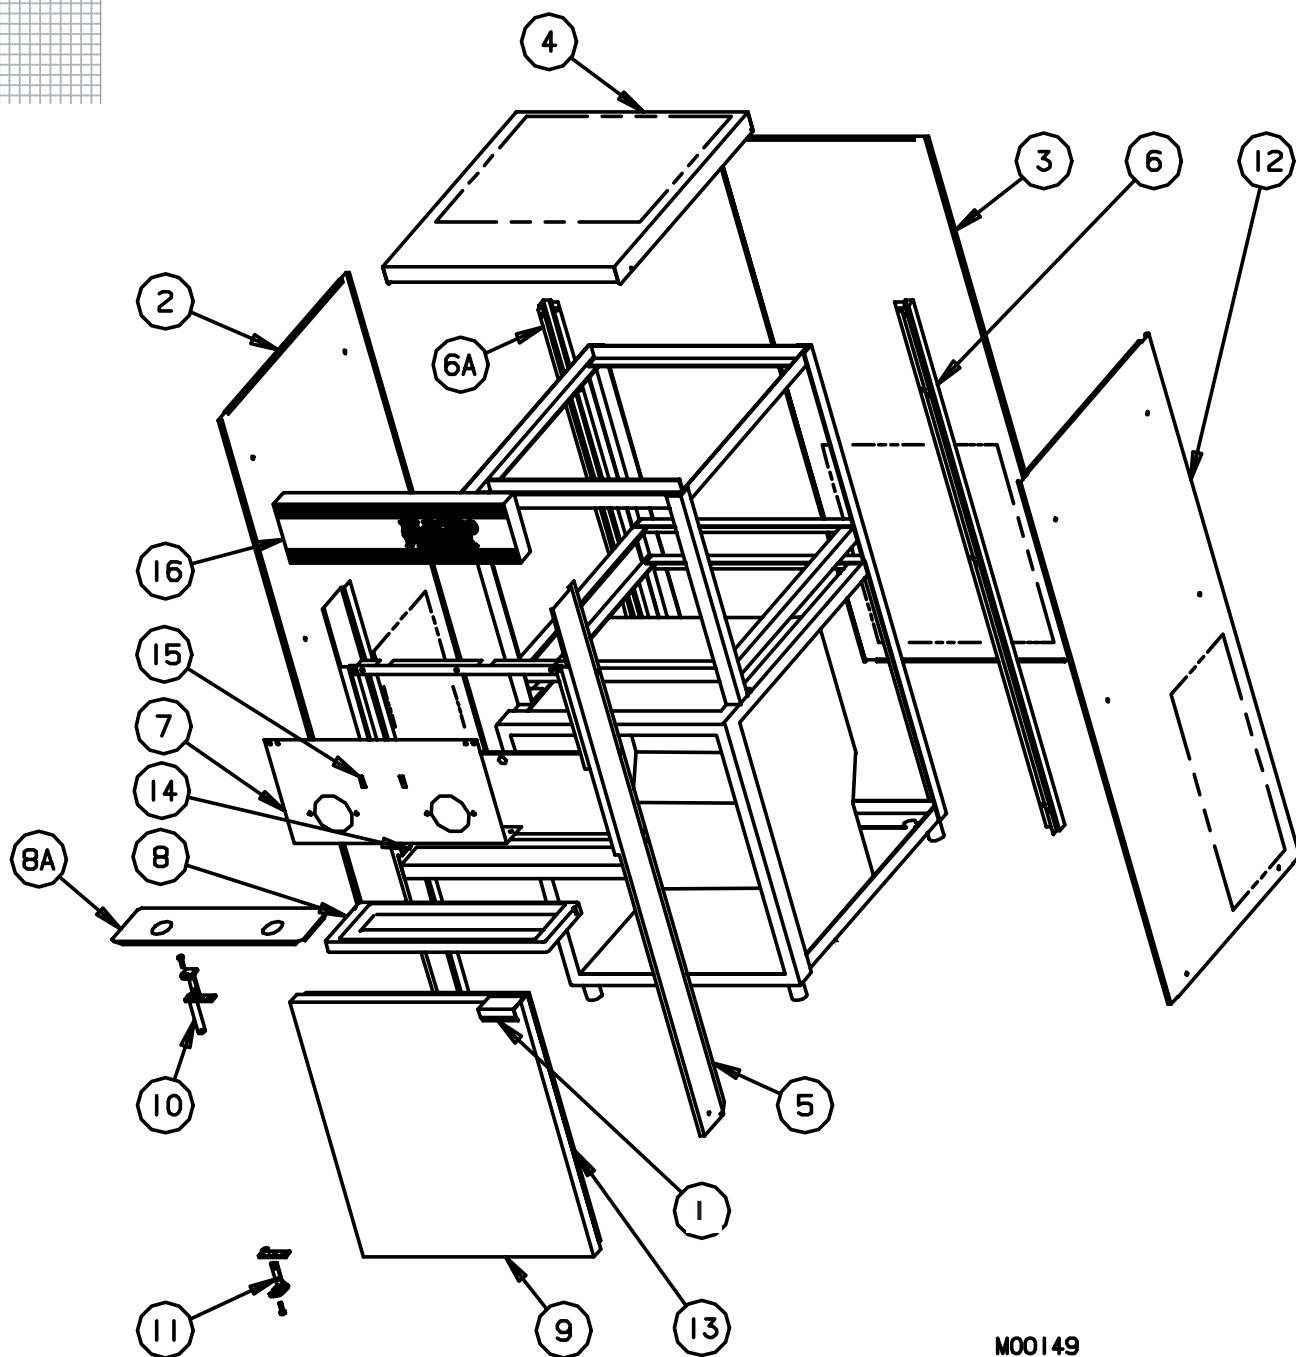


M00149

Figure 10 Panels (sheet 2 of 2)

Item	Part No.	Description
1	136199	Pull-Door
2	136289-C	Panel-Side LH
3	136313-C	Panel-Rear (Water or Air Cooled)
3A	138982	Panel-Upper Rear (Air Cooled Remote)
3B	138983	Panel-Lower Rear (Air Cooled Remote)
4	114157-C	Panel-Assy. Top (Water Cooled or Air Cooled Remote)
4A	116567-C	Panel-Assy. Top (Air Cooled)
5	113983-C	Panel-Assy Front
6	130021-C	Channel-Rear RH
6A	135254-C	Channel-Rear LH
7	139221-C	Panel-Dispense
8	196108	Tray-Drip 26 inch Black
8A	114608	Insert-Assy. Drip Tray
		136898 Insert-Drip Tray
		199030 Bumper-Rubber
9	114260-C	Door-Assy. Complete 26" EF
9A	118597	Actuator-Assy. Door Switch
10	162045	Hinge-Pivot 1-3/8 Top LH
10A	162052	Spring-LH
11	162046	Hinge-Pivot 1-3/8 Bottom LH
12	136216-C	Panel-Side RH
13	160563	Gasket-Magnetic
14	114374	Tube-Assy. Drain
15	150540	Lights-Mix Indicator
16	115292-03	Trimstrip-Assy EF Decal 26 inch
		165188-01 Decal-Trimstrip EF Logo 26 inch

Hardware for 30RMT Panels				
Panel	Screw	Nut-Speed	Spacer	Nut-Speed on Frame
Channel-Rear	160048	160117	n/a	n/a
Dispense	160076	159132	n/a	n/a
Front	160076	159132	n/a	159067
Rear	160048	160114	138456	n/a
Side	159219	160114	138546	n/a
Top	160305	n/a	n/a	n/a
Trimstrip	160076	n/a	n/a	n/a
n/a - Not Applicable				

Decals	
Part No.	Description
165119	6 Inch Air Flow
165025	Beater Warning
164113	Cleaning Instructions
165093	Clear Overlay
165013	CMT Patent
164110	MTS Connect Red Line
164004-01	Operating Instructions
165126	Panel Removal
165124	Top Air Discharge (A/C & W/C)
165133	Trimstrip LH
165134	Trimstrip RH
169048	Ventilation (A/CRemote)
165246	Warning Pressurized

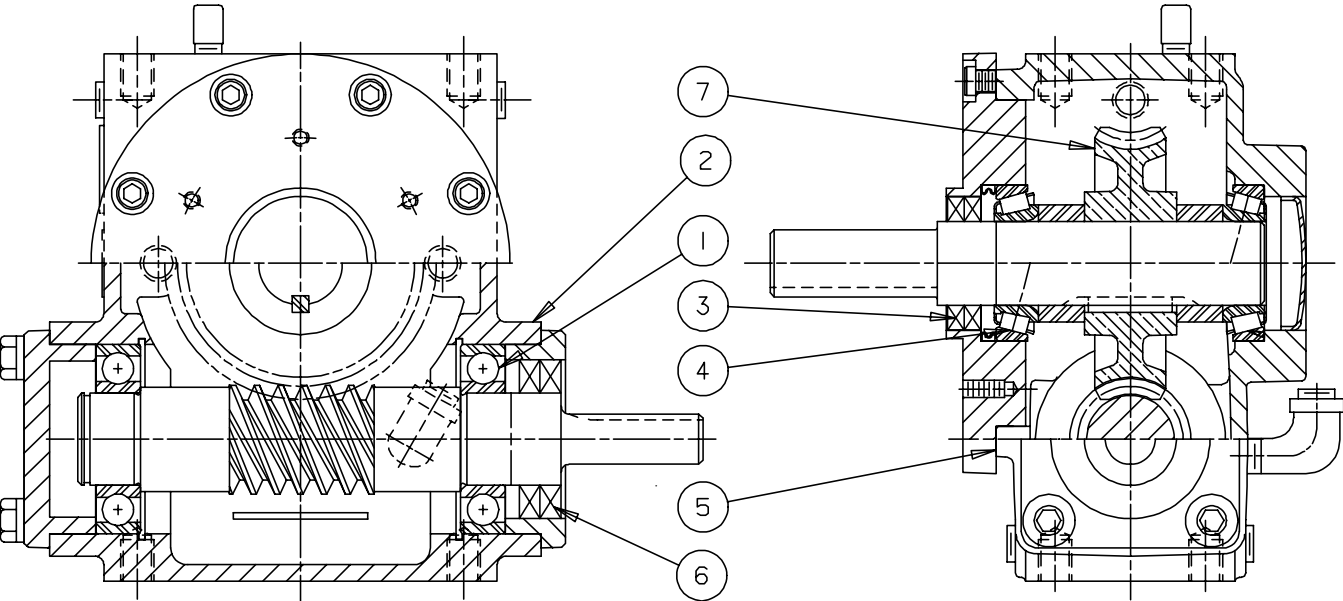

M00830

Figure 11 Gear Reducers

Model HCD926

153355 10:1 Ratio A Side 153356 10:1 Ratio B Side

Item	Part No.	Description	Quantity Required
1	153065	Bearing-Ball 1.378 ID x 2.835 OD	2 ea.
2	153066	Gasket-High Speed	1 ea.
3	153071	Seal-Slow Speed	2 ea.
4	153068	Bearing-Slow Speed Cone 1.25"	2 ea.
4A	153069	Bearing-Slow Speed Cup 2.328"	2 ea.
5	153070	Gasket-Slow Speed	1 ea.
6	153067	Seal-High Speed	2 ea.
7	153301	Gear-Slow Speed	1 ea.
	118742	Kit-Reducer Gasket Model HCD926	
	158055	Oil-Special Gear Lube	


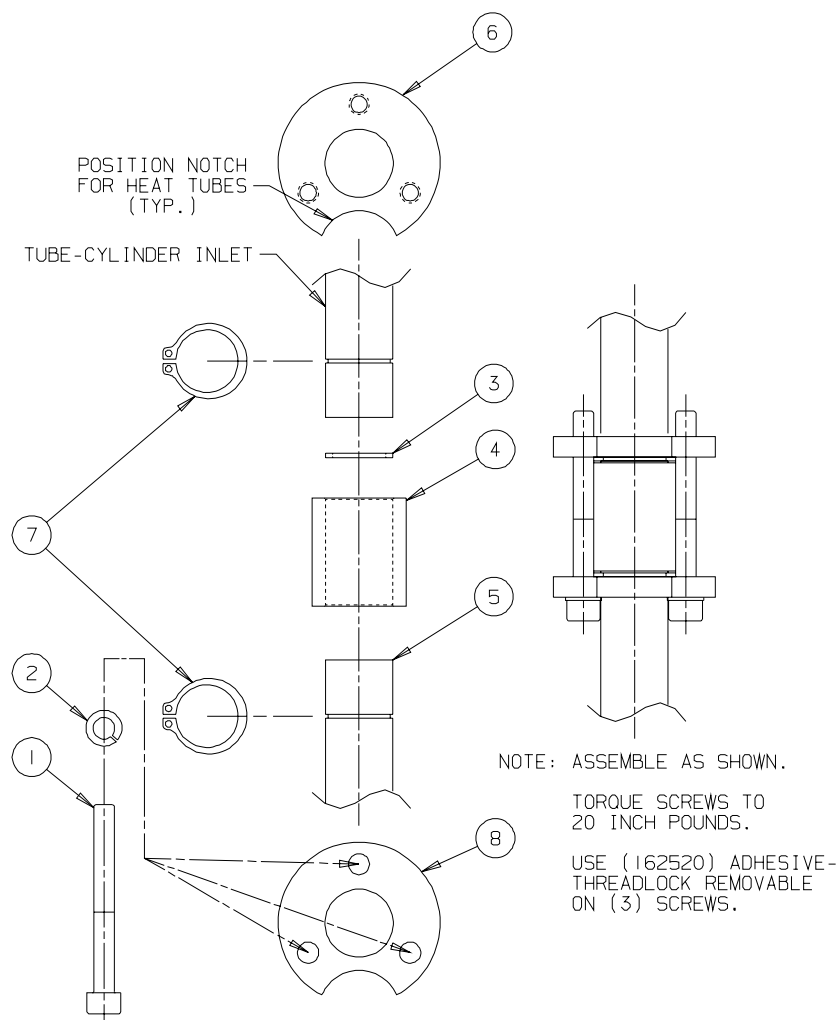


Figure 12 Mix Feed Seal Assembly

Item	Part No.	Description
1	160320	Screw-SKHC #10-24 x 1-3/4 SST
2	160166	Washer-Lock #10 SST
3	160556	Gasket-Mix Joint
4	139351	Collar-Alignment
5	139349	Tube-Mix Feed Clamp
6	139352	Clamp-Ring Threaded
7	160312	Ring-Retaining 5/8 Ext. SST
8	139353	Clamp-Ring

Figure 13 Air Cooled Remote Condenser

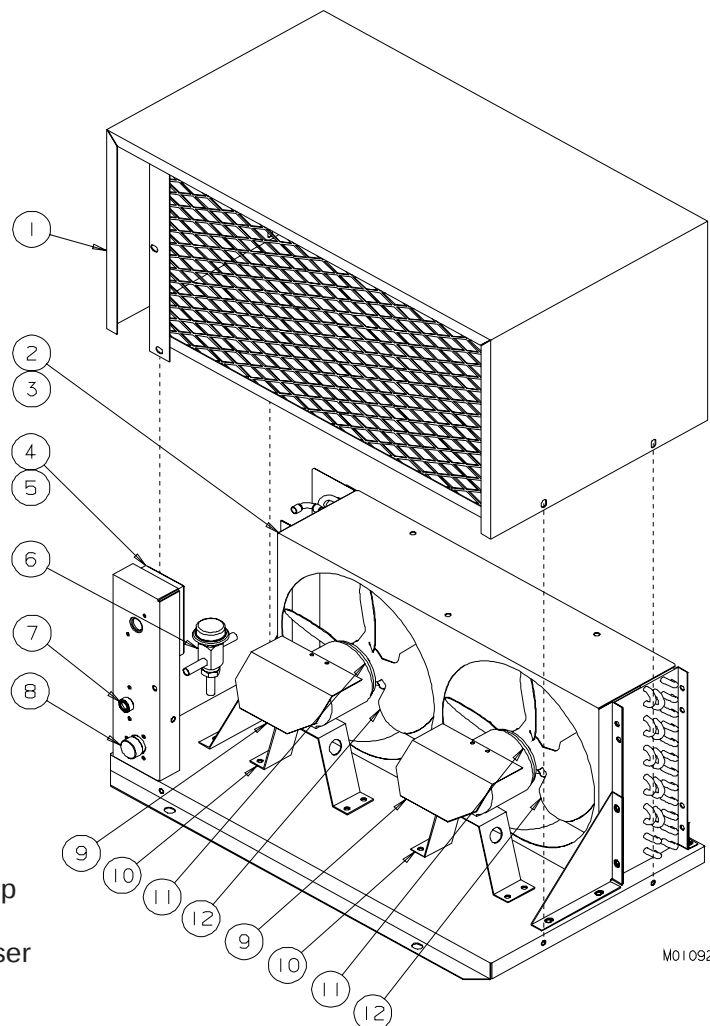

REF.	PART No.	DESCRIPTION
*	116781-01	Condenser-Assy. 2 Hp Remote (Complete)
1	117207	Cover-Assy. Condenser
2	155120-C	Condenser-Air
3	138465	Shroud-Fan
4	150732	Box-Electric 2-3/4 x 4-1/2 x 2
5	150737	Cover-Electric Box 2-3/4 x 4-1/2
6	155454	Valve-Head Pressure Control
7	153420	Coupling-Refr. 3/8 MQC 3/8 SW
7A	140039	Plate-Coupling Mtg.
8	153418	Coupling-Refr. 1/2MQC 1/2 SW
8A	153502	Flange-Refr. Coupling Mount 1/2
8B	153503	Cap-Dust Refr. Coupling
9	139017	Shield-Motor Rain
10	137632	Bracket-Fan Condenser
11	151072	Motor-Fan 50W 230V 60Hz
12	159029	Blade-Fan 11" Dia 36°




* Includes all items above.

- 155058 Receiver-12 lb. Horizontal Mount (not shown)
- 155465 Cut Out-Low Pressure (not shown)
- 155466 Control-Pressure Fan (not shown)
- 119124 Kit-25 Foot Line Sets 404a
- 119125 Kit-50 Foot Line Sets 404a

Accessories

Part No.	Description
196103	Bottle-Wash 500 ml
158004	Brush-4" w/36" handle
158009	Brush-4" dia w/o handle
158018	Brush-7/16" Dia x 12" Overall Length
158019	Brush-9/16" Dia x 30" Overall Length
158026	Brush-1" Dia 12" Long
162105	Caster-1-1/4" ST w/Brake
162106	Caster-1-1/4" ST w/o Brake
116100	Kit-O-ring
112978	Leg-Assy. Six Inch
158000A	Lubricant-Petrol Gel 4 oz. Tube
158013	Sanitizer-Stera Sheen (sample)
158104	Sanitizer-Stera Sheen (case/4 jars)
158014A	Sanitizer-Stera Sheen (4 lb. jar)
158049	Scale-Overrun
169374	Tool-O-ring Removal
184881	Video-Training RMT SS EF
184256	Chart-O-ring (Laminated)

SOFT SERVE DISPENSING HEADS

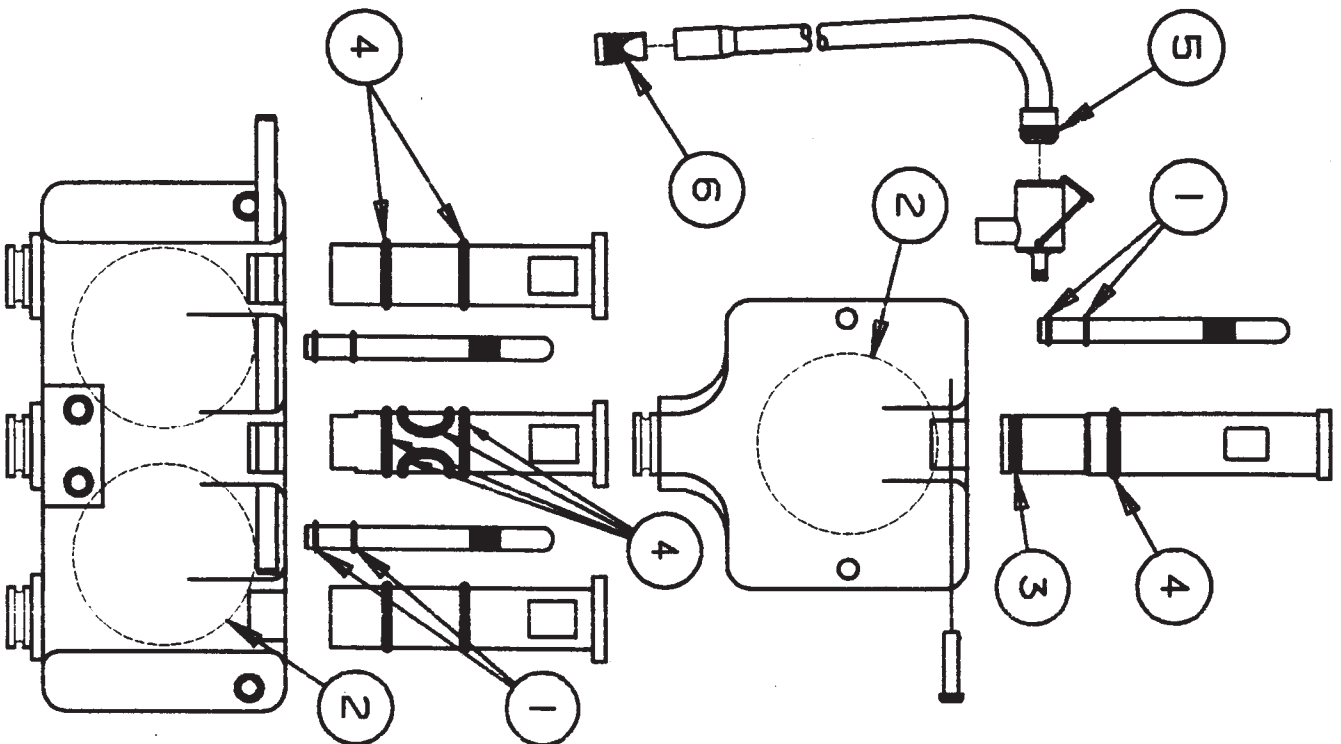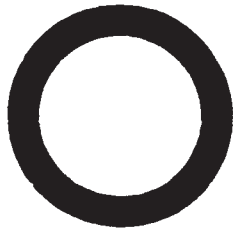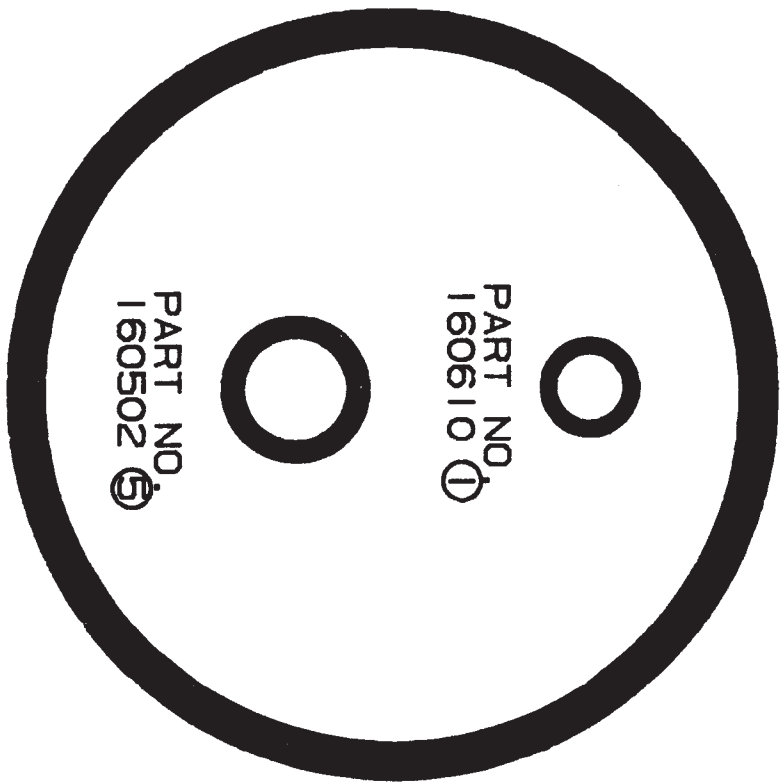

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Actuator-Assy. Door Switch	118597	1	F2I	—
Adaptor-Overload Din Rail	150145	2	F2I	—
Arm-Shoe Pivot (MTS-RMT)	138797	2	F2I	—
Arm-Swing Clamp (MTS-RMT)	138799	2	F2I	—
Base-Probe Mtg.	137120	2	F2I	—
Bearing-Ball 1.378 IDx2.835 OD (Gear Reducer)	153065	4	F2I	—
Bearing-Slow Speed Cone 1.25" (Gear Reducer)	153068	4	F2I	—
Bearing-Slow Speed Cup 2.328" (Gear Reducer)	153069	4	F2I	—
Belt-V RH	153162	2	F2I	—
Belt-V LH	153171	2	F2I	—
Blade-Fan 11" Dia. 36° (A/C)	159023	4	F2I	—
Blade-Fan 11" Dia 36° (Air Cooled Remote)	159029	2	F2I	—
Blade-Scraper Soft Serve	137334	4	F2I	—
Block-Insulation	165524	2	F2I	—
Boot-Mix Tube (Seal) (RMT Hose Assy.)	199033	2	F2I	—
Bottle-Wash	196103	1	F2I	—
Box-Electric 2-3/4x4-1/2x2 (Air Cooled Remote)	150732	1	F2I	—
Bracket-Assy. Electric Box (Air Cooled Remote)	117197	1	F2I	—
Bracket-Fan Condenser (Air Cooled Remote)	137632	2	F2I	—
Bracket-Flange Relay Mtg. (MTS Relay Box)	138159	1	F2I	—
Brush-4 in. dia w/o handle	158009	1	F2I	—
Brush-4 in. w/36 in. handle	158004	1	F2I	—
Brush-7/16 Dia x 12 in Overall Length	158018	1	F2I	—
Brush-9/16 Dia x 30 in. Overall Length	158019	1	F2I	—
Brush-1" Dia 12" Long	158022	1	F2I	—
Bumper-Rubber (Drip Tray Insert)	199030	4	F2I	—
Bushing-Cylinder (Head Assembly)	196085	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Button-Overload Reset	150150	2	F2I	—
Button-Reset	159036	2	F2I	—
Cap-Dust Refr. Coupling (Air Cooled Remote)	153503	1	C2I	—
Capacitor-Beater Motors	<i>See Motor-Beater</i>			
Capacitor-Compressor	<i>See Compressor-Assy.</i>			
Caster-1-1/4 ST w/ Brake	162105	2	F2I	—
Caster-1-1/4 ST w/o Brake	162106	2	F2I	—
Catch-Bullet (Button-Drip Tray)	159175	2	F2I	—
Channel-Rear LH	135254-C	1	F2I	—
Channel-Rear RH	130021-C	1	F2I	—
Chart-O-ring (Laminated)	184256	1	F2I	—
Clamp-Assy. Soft Hose 5/8 (RMT Hose Assy.)	116065	6	F2I	—
Clamp-Hose (Drain)	160738	1	F2I	—
Clamp-Ring (Mix Feed Seal Assy)	139353	2	F2I	—
Clamp-Ring Threaded (Mix Feed Seal Assy)	139352	2	F2I	—
Clamp-Shoe Swing (Mix Feed Seal Assy)	138798	1	F2I	—
Clip-Retainer	150120	4	F2I	—
Clip-Tube Retainer (Pickup Tube)	162324	2	F2I	—
Coil-Evaporator (Cabinet-Ceiling Type)	155111	1	F2I	—
Coil-Replacement	150134	*	F2I	—
Collar-Alignment	139351	2	F2I	—
Compressor-Assy (1 Phase)(Maneurop)	118685	2	F2I	—
Capacitor-Run	151447	2	F2I	—
Kit-Compr. Start Capacitor & Relay	151448	2	F2I	—
Drier-Filter	155054	2	F2I	—
Compressor-Assy. (3 Phase)(Maneurop)	118686	2	F2I	—
Drier-Filter	155054	2	F2I	—
Condenser-Air (Air and Air Cooled Remote)	155120-C	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Condenser-Assy. 2 Hp (Complete) (Air Cooled Remote)	116781-01	1	F2I	—
Condenser-Water	155029	1	F2I	—
Connector 1/2 (MTS Relay Box)	150828	1	F2I	—
Contactor (Beater Motor)	150135	2	F2I	—
Contactor (Cabinet)	150135	1	F2I	—
Contactor (Compressor)	150135	2	F2I	—
Control-Pressure Fan (Air Cooled Remote)	155466	2	F2I	—
Cord-Assy. Female Plug	150533	1	F2I	—
Cord-Assy. Male Plug	150532	1	F2I	—
Cord-Assy. Motor (MTS-RMT)	118833	2	F2I	—
Cordset-Mix Level Probe	150537	2	F2I	—
Coupling-Assy 1 in Drive (Beater Shaft)	111964	2	F2I	—
Coupling-Refr.1/2MQC 1/2 SW (Air Cooled Remote)	153418	1	F2I	—
Coupling-Refr.3/8MQC 3/8SW (Air Cooled Remote)	153420	1	F2I	—
Cover-Assy. Condenser (Air Cooled Remote)	117207	1	F2I	—
Cover-Assy. Mix Tank Front (6 or 7 Gal.)	113997	2	F2I	—
Cover-Assy. RMT	118767	2	F2I	—
Cover-Electric 2-3/4 x 4-1/2 x 2 (Air Cooled Remote)	150737	1	F2I	—
Cover-Rear Mix RMT	138165-01	2	F2I	—
Cut Out-High Pressure	155425	2	F2I	—
Cut Out-Low Pressure (Air and Water Cooled)	155403	2	F2I	—
Cut Out-Low Pressure (Air Cooled Remote)	155465	2	F2I	—
Cylinder-Assy. Complete LH	118821	2	F2I	—
Cylinder-Assy. Complete RH	118822	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203–230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Decal-6" Air Flow	165119	1	F2I	—
Decal-Beater Warning	165025	1	F2I	—
Decal-Cleaning Instructions	164113	1	F2I	—
Decal-Clear Overlay	165093	1	F2I	—
Decal-CMT Patent	165013	1	F2I	—
Decal-MTS Connect Red Line	164110	1	F2I	—
Decal-Operating Instructions	164004-01	1	F2I	—
Decal-Panel Removal	165126	3	F2I	—
Decal-Top Air Discharge	165124	1	F2I	—
Decal-Trimstrip EF Logo 26 inch	165188-01	1	F2I	—
Decal-Trimstrip LH	165133	1	F2I	—
Decal-Trimstrip RH	165134	1	F2I	—
Decal-Ventilation	169048	1	F2I	—
Decal-Warning Pressurized	165246	2	F2I	—
Decal-Warning Rotating Parts	165048	2	F2I	—
Door Assy.-Complete w/Hinges	114260-C	1	F2I	—
Drier	<i>See Filter-Drier</i>			
Duckbill-Inlet (Valve) (RMT Hose Assy.)	199032-01	2	F2I	—
Faceplate-Assy. MTS	118764	2	F2I	—
Fan-Intake	151105	2	F2I	—
Filter-Assy.	116125	1	F2I	—
Filter-Drier w/sweat	155054	2	F2I	—
Flange-Refr. Coupling Mount (Air Cooled Remote)	153502	1	F2I	—
Gasket-High Speed (Gear Reducer)	153066	2	F2I	—
Gasket-Kit (Gear Reducer)	118742	*	F2I	—
Gasket-Magnetic (V-Groove-Door)	160563	1	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Gasket-Mix Joint (Mix Feed Seal Assy.)	160556	2	F2I	—
Gasket-Slow Speed (Gear Reducer)	153070	2	F2I	—
Gauge-Assy. Pressure Test	116312	1	F2I	—
Gearmotor-1/8 hp CSIR (MTS Motor)	151132	2	F2I	—
Capacitor-Start w/Bleed	150512	2	F2I	—
Switch-Start Solid State (Relay)	150893	2	F2I	—
Gear-Slow Speed (Gear Reducer)	153301	2	F2I	—
Glass-Sight-w/sweat	155059	2	F2I	—
Guard-Fan Open	151076	1	F2I	—
Guide-Assy.Push Rod	114174	2	F2I	—
Handle-Assy. Dispense	110007	2	F2I	—
Knob-Ball 3/7-16 TH Black	162629	2	F2I	—
Handle(Pull)-Door (Cabinet)	136199	2	F2I	—
Head-Assy.w/Actuator & Bleed (Complete)	118902	2	F2I	—
Handle-Assy. Dispense	110007	2	F2I	—
Knob-Ball 3/8-16 TH Black	162629	2	F2I	—
Head-only	118566	2	F2I	—
Nozzle-Serrated	196185	2	F2I	—
Pin-Handle	160268	2	F2I	—
Plug-Air Bleed	138149	2	F2I	—
Plunger-Dispense Self Close	139581	2	F2I	—
O-Ring (Head)	159309	2	F2I	—
O-Ring (Plunger-Upper)	160501	2	F2I	—
O-Ring (Plunger-Lower)	160582	2	F2I	—
O-Ring (Plug)	160610	4	F2I	—
Hinge-Pivot 1-3/8 Bottom	162046	1	F2I	—
Hinge-Pivot 1-3/8 Top	162045	1	F2I	—
Hose-Assy. Mix Braided (MTS)	116094	2	F2I	—
Hose-Transfer Red Line (RMT Hose Assy.)	138836	2	F2I	—
Hose (Tube)-Air Meter (RMT Hose Assy.)	138170-02	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Indicator-Light 230v	150540	2	F2I	—
Indicator-Mix Level	150202	2	F2I	—
Insert-Assy. Drip Tray	114608	1	F2I	—
Bumper-Rubber	199030	4	F2I	—
Insert-Drip Tray	136898	1	F2I	—
Key-Drive 3/16 sq x 1-1/2 (Gear Reducers & sheaves)	153322	4	F2I	—
Kit-25 Foot Line Sets 404a (Air Cooled Remote)	119124	*	F2I	—
Kit-50 Foot Line Sets 404a (Air Cooled Remote)	119125	*	F2I	—
Kit-Compressor Start Capacitor & Relay	151448	2	F2I	—
Kit-Cover Switch RMT Freezer	118894	2	F2I	—
Kit-Dispense Head Switch	116410	*	F2I	—
Kit-Motor & Cap 2 hp (1 phase)	118140	*	F2I	—
Kit-O-ring	116100	*	F2I	—
Kit-Pressure Switch	118712	*	F2I	—
Kit-Reducer Gasket Model HCD926	118742	*	F2I	—
Kit-Roller Complete (MTS)	116009-01	*	F2I	—
Kit-Solenoid Valve Repair	155434	*	F2I	—
Kit-Water Valve Repair	155444	*	F2I	—
Knob-Ball 3/8-16 TH Black (Dispensing Handle)	162629	1	F2I	—
Knob-Cover RMT	138889	2	F2I	—
Knob-Hand (Dispense Head)	136798	2	F2I	—
Knob-Hand (Handle-MTS)	162622	2	F2I	—
Knob-Timer	162604	2	F2I	—
Label-MTS Trimstrip LH (Switches)	165133	1	F2I	—
Label-MTS Trimstrip RH (Switches)	165134	1	F2I	—
Lanyard-Wire (MTS-RMT)	138890	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Leg-Assy. Six inch	112978	4	F2I	—
Lever-Assy Reset (Overload)	118390	2	F2I	—
Button-Reset	159036	2	F2I	—
Lights-Mix Indicator	150540	2	F2I	—
Lubricant-Petrol Gel (per tube)	158000A	*		
Meter-Air (RMT Hose Assy.)	(Order by Meter Number)			
Module-Plug On Vari Time	150253	2	F2I	—
Motor-Beater & Capacitors 2 hp (1 ph.)	118140	2	F2I	—
Capacitor-Run	150873	2	F2I	—
Capacitor-Start	150872	4	F2I	—
Motor-2 hp (3 ph.)(Beater Motor)	151052	2	F2I	—
Motor-Fan 50W 230v 60Hz(Air Cooled Remote)	151072	2	F2I	—
Motor-Fan 50w 230v 60Hz (Air Cooled)	151077-01	4	F2I	—
Motor-1/8 hp (MTS-Gearmotor)	151132	2	F2I	—
Capacitor-Start w/Bleed	150512	2	F2I	—
Switch-Start Solid State (Relay)	150893	2	F2I	—
MOV-Assy.	116188	2	F2I	—
MT-Assy. Cab Red Line	118751	2	F2I	—
Nozzle-Serrated	196185	2	F2I	—
Nut-Hex #6-32 ZN (Switch Assy.)	160309	4	F2I	—
Nut-Hex 1/4-20 ZN (Adjusting Bolt-Switch Assy.)	160104	2	F2I	—
Nut-HEX 3/8-16 SST	159927	4	F2I	—
Nut-HXSF 1/4-20 SST	159933	6	F2I	—
Nut-HXSF 1/4-20 ZN (MTS Relay Box)	159951	4	F2I	—
Nut-Speed 1/4-20 BP&O (Side & Rear Panels)	160114	*	F2I	—
Nut-Speed 1/4-20 .064-.125 (Rear Channel)	160117	*	F2I	—
Nut-Speed #6-32 BKOX (MTS Relay Box)	160116	4	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Nut-Speed #10-24 .025-.064 SST (Dispense & Front Panel)	159132	*	F2I	—
Nut-Speed #10-24 .100-.125 (Front Panel)	159067	*	F2I	—
Oil-Special Gear Lube (per quart)	158055	*	F2I	—
O-Ring (Head)	159309	2**	F2I	—
O-Ring (Pickup Tube)	160502	2**	F2I	—
O-Ring (Plug)	160610	4**	F2I	—
O-Ring (Plunger-Lower)	160582	2**	F2I	—
O-Ring (Plunger-Upper)	160501	2**	F2I	—
O-Ring (Roller Shoe)	160612	2	F2I	—
O-Ring (Seal-Beater Shaft)	160500	2**	F2I	—
O-ring (Swing Clamp)	160628	2	F2I	—
Pan-Assy. Condensate Pan (Ceiling Type)	117133	1	F2I	—
Panel Assy.-Top (Air Cooled)	116567-C	1	F2I	—
Panel Assy.-Top (Water Cooled or Air Cooled Remote)	114157-C	1	F2I	—
Panel-Assy Front	113983-C	1	F2I	—
Panel-Dispense	139221-C	1	F2I	—
Panel-Lower Rear (Air Cooled Remote)	138983	1	F2I	—
Panel-Rear (Water or Air Cooled)	136313-C	1	F2I	—
Panel-Side LH	136289-C	1	F2I	—
Panel-Side RH	136216-C	1	F2I	—
Panel-Switch Box E/EF Label (Trimstrip)	115292-03	1	F2I	—
Panel-Upper Rear (Air Cooled Remote)	138982	1	F2I	—
Pin-Dowel 1/4 DIA x 3/4 SST (MTS-RMT)	160338	4	F2I	—
Pin-Handle (Head Assembly)	160268	1	F2I	—
Plate-Backup MTS	139746	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Plug-Air Bleed	138149	2	F2I	—
Plunger-Dispense Self Close	139581	2	F2I	—
Port-Assy. Inlet Mix/Air (Pickup Tube)	118765	2	F2I	—
Probe-Assy. Mix Level 10-3/4" (7 Gal.)	115397	2	F2I	—
Pull-Door (Handle Cabinet)	136199	1	F2I	—
Pulley	See "Sheave"			
Push Rod-Assy. Plunger Switch	113426	2	F2I	—
Receiver-3 lb 3/8 ID (Air and Water Cooled)	155057	2	F2I	—
Receiver-12 lb Horz. Mount (Air Cooled Remote)	155058	2	F2I	—
Receptacle-Molded Level Sensor	150536	2	F2I	—
Reducer-Gear LH 10/1 HCD926	153355	1	F2I	—
Reducer-Gear RH 10/1 HCD926	153356	1	F2I	—
Relay-Assy Overload 1 Phase 5-15A	118359	2	F2I	—
Adapter-Overload Din Rail	150145	2	F2I	—
Button-OL Reset Adapter	150150	2	F2I	—
Relay-SS Overload 1 Phase 5-15A	150140	2	F2I	—
Relay-Assy. Overload 3 Phase 3.7-12A	118361	2	F2I	—
Adapter-Overload Din Rail	150145	2	F2I	—
Button-OL Reset Adapter	150150	2	F2I	—
Relay-SS Overload 3 Phase 3.7-12A	150142	2	F2I	—
Relay-Flange Base w/Cover (MTS Relay Box)	150381	1	F2I	—
Relay-Start	See Compressor or Motor-Beater			
Ring-Retaining 5/8 Ext. SST(Mix Feed Seal Assy.)	160312	4	F2I	—
Rod(Push)-Assy. Plunger Switch	113426	2	F2I	—
Roller-Kit (MTS)	116009-01	*	F2I	—
Sanitizer-Stera Sheen (per case)	158014	*	F2I	—
Sanitizer-Stera Sheen (per jar)	158014A	*	F2I	—
Sanitizer-Stera Sheen (sample)	158013	*	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Scale-Overrun	158049	1	F2I	—
Screw-HXHM 1/4-20 x 2-1/2 (Adjusting-Switch)	159965	2	F2I	—
Screw-HXSF 1/4-20 x 1/2ZN (MTS Relay Box)	159950	2	F2I	—
Screw-RDHM #6-32 x 5/16ZN(MTS Relay Box)	160308	2	F2I	—
Screw-SK Set 5/16-18 x 3/8 (Gear Reducer)	160495	2	F2I	—
Screw-SKHC #6-32 x 1 BKOX (Switch Assy.)	160381	4	F2I	—
Screw-HXHC 1/4-20 x 2-1/2 SST (MTS-RMT)	160464	4	F2I	—
Screw-HXHC 1/4-20 x 3-1/2 SST (MTS-RMT)	160465	2	F2I	—
Screw-HXSF 1/4-20 x 11/16 SST (MTS-RMT)	159939	2	F2I	—
Screw-RDHM #4-40 x 1/5 STL (MTS-RMT)	160357	4	F2I	—
Screw-SKHC #10-24 x 1-3/4 SST (Mix Feed Seal Assy.)	160320	2	F2I	—
Screw-TRPM 1/4-20X1/2 SST (Rear Panel & Channels)	160048	*	F2I	—
Screw-TRPM 1/4-20X1 SST (Side Panel)	159219	*	F2I	—
Screw-TRPM #10-24X1/2 SST (Dispense & Front Panel, Trimstrip)	160076	*	F2I	—
Screw-TRPM #10-24X3/8 SST (Top Panel)	160305	*	F2I	—
Screw-TRPS 1/4-28 x 2-1/4 SST (MTS-RMT)	160093	8	F2I	—
Seal-Assy. Shaft	111875	2**	F2I	—
O-Ring	160500	2	F2I	—
Seal-Beater Shaft	160557	2	F2I	—
Washer-Shaft Seal	133098	2	F2I	—
Seal(Boot)-Mix Tube	199033	2	F2I	—
Seal-High Speed (HCD926 Gear Reducer)	153067	4	F2I	—
Seal-Slow Speed (HCD926 Gear Reducer)	153071	4	F2I	—
Sensor-10K Thermistor	161216	2	F2I	—
Shaft-Assy. Beater	113438	2	F2I	—
Sheave-5/8 Bore 4.75 OD (Pulley-Driven)	153625	2	F2I	—
Sheave-7/8 Bore 3.25 OD (Pulley-Driver)	153626	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Shield-Drip (MTS-RMT)	139756	2	F2I	—
Shield-Motor Rain (Air Cooled Remote)	139017	2	F2I	—
Shoe-Roller (MTS-RMT)	139751	2	F2I	—
Shroud-Assy. Evaporator (Cabinet-Ceiling Type)	117129-01	1	F2I	—
Shroud-Fan (Air Cooled Remote)	138465	1	F2I	—
Sleeve-Cable Stop 3/64 (MTS-RMT)	160508	4	F2I	—
Socket-Octal Terminal (Switch Box)	150119	2	F2I	—
Spacer-Motor (MTS-RMT)	138793	8	F2I	—
Spacer-Panel (Rear & Side Panels)	138456	18	F2I	—
Spacer-Swing Arm (MTS-RMT)	138800	4	F2I	—
Spring-Compresson (Plunger Switch)	162323	2	F2I	—
Spring-LH (Pivot Hinge)	162052	1	F2I	—
Strip-Terminal (Switch Box)	150795	2	F2I	—
Strip-Terminal (Switch Box)	150798	1	F2I	—
Stud-Assy. Cylinder 1-15/16 inch	114341	2	F2I	—
Stud-5/16-18 x 3/4 SST (MTS-RMT)	160386	2	F2I	—
Support-Condenser (Air Cooled Remote)	137629	2	F2I	—
Support-MTS (MTS Relay Box)	139805	2	F2I	—
Support-Roller Bearing (MTS-RMT)	138783-01	2	F2I	—
Switch-Assy. Self Closing Plunger	114176-01	2	F2I	—
Guide-Assy.Push Rod	114174	2	F2I	—
Nut-Hex #6-32 ZN	160309	4	F2I	—
Nut-Hex 1/4-20 ZN (Adjusting Bolt)	160104	2	F2I	—
Screw-HXHM 1/4-20 x 2-1/2 (Adjusting)	159965	2	F2I	—
Screw-SKHC #6-32 x 1 BKOX (Switch)	160381	4	F2I	—
Spring-Compression	162323	2	F2I	—
Switch-Roller Actuator SPDT (Plunger)	150477	2	F2I	—
Washer-EXT Tooth #6 ZN (Lock)	160392	4	F2I	—
Washer-Flat #6 Brass	160393	8	F2I	—
Switch-Dispense Head Kit	116410	1	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM – TO)	
Switch-Door Push Button (Evaporator)	150509	1	F2I	—
Switch-Pressure Switch Kit	118712	2	F2I	—
Switch-Roller Actuator SPDT (Plunger)	150477	2	F2I	—
Switch-Toggle 3PDT Ctr Off (Selector)	150465	2	F2I	—
Switch-Toggle DPDT Ctr Off (MTS)	159235	2	F2I	—
Switch-Toggle DPST (Day/Night)	159235	2	F2I	—
Switch-Toggle SPST (Cabinet)	159235	1	F2I	—
Tank-Mix 7 Gal. 13-1/4"	196222	2	F2I	—
Thermometer-Barrel (Cabinet-Ceiling Type)	161004	1	F2I	—
Thermostat-Assy. w/Cover (Cabinet)	118868	1	F2I	—
Thermostat-Low (Day & Night)	155442	4	F2I	—
Timer-.5-60 Delay on Break (Switch Box)	150252-01	2	F2I	—
Timer-12 Sec DOB (Switch Box)	150208	2	F2I	—
Timer-5 Minute Mechanical (Switch Box)	150218	2	F2I	—
Tool-O-ring Removal	169374	1	F2I	—
Tray-Drip 26 inch Black	196108	1	F2I	—
Trimpstrip-Assy EF Decal 26 inch	115292-03	1	F2I	—
Tube-Air (Hose)	138170-02	2	F2I	—
Tube-Assy. Drain	114374	2	F2I	—
Tube-Assy. Mix Inlet (Pickup Tube)	118836	2	F2I	—
Tube-Assy. Pickup (RMT Hose Assy.)	118842	2	F2I	—
Clip-Tube Retainer	162324	2	F2I	—
O-Ring	160502	2	F2I	—
Port-Assy. Inlet Mix/Air	118765	2	F2I	—
Tube-Assy. Mix Inlet	118836	2	F2I	—
Tube-Drain Support	138919	1	F2I	—
Tube-Mix Feed Clamp (Mix Feed Seal Assy.)	139349	2	F2I	—
Tubing-.375 ID x .500 OD PVC	196068	6.25	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.

Alphabetized Parts List for Model 30RMT

Important: All parts shown are for standard models designed for 230V/1PH/60HZ or 203-230V/3PH/60HZ.

PART DESCRIPTION	PART NUMBER	QTY	SERIAL NUMBER (FROM - TO)	
Valve-Assy.Rotalock LH (Compressor-Maneurop)	118258	2	F2I	—
Valve-Assy.Rotalock RH (Compressor-Maneurop)	118257	2	F2I	—
Valve-Assy. Water	112080	2	F2I	—
Valve-Water	155410	2	F2I	—
Valve-Automatic Expansion (Cabinet)	155449	1	F2I	—
Valve-Automatic Expansion (Cylinder)	155451	2	F2I	—
Valve-Check 1/2 OD Sweat (Air Cooled Remote)	155409	2	F2I	—
Valve-Duckbill-Inlet	199032-01	2	F2I	—
Valve-Head Pressure Control(Air Cooled Remote)	155454	1	F2I	—
Valve-Solenoid	155421	3	F2I	—
Valve-Solenoid Repair Kit	155434	*	F2I	—
Valve-Water Repair Kit	155444	*	F2I	—
Video-Mix Transfer System	184881	*	F2I	—
Washer-Curved Spring (MTS-RMT)	160145	4	F2I	—
Washer-EXT Tooth #6 ZN (Lock)(Switch Assy.)	160392	4	F2I	—
Washer-Flat 3/8 SST (MTS-RMT)	160170	4	F2I	—
Washer-Lock #10 SST (Mix Feed Seal Assy.)	160166	2	F2I	—
Washer-Lock 3/8 SST (MTS-RMT)	160169	4	F2I	—
Washer-Flat #6 Brass (Switch Assy.)	160393	8	F2I	—
Washer-Shaft Seal (Beater Shaft)	133098	2	F2I	—
* As Required ** Items Included In O-Ring Kit No. 116100 *** LH or RH — Left or right hand is determined as you face the front of freezer. NLA No Longer Available				

Use only original or authorized replacement parts with this freezer.